



WAB-P-FCKS

Biometric Fingerprint Reader


Quick Start Guide

(1) Introduction

BEM FCKS can be used as a simple Stand Alone Access Controller or connected to high end access control systems using its TCP/IP port. When connected to WatchNET Access Control system the software can search this unit as a Biometric Controller and almost all functions applicable to the standard controller works with this unit. The unit reports all the data back to the controller without the need of a Wiegand connection between this unit and the controller.

(2) Wiring

Icon	No.	Connection	Definition	Icon	No.	Connection	Definition
J1	1	GND	Power Supply	J3	13	D1_Out	Reader Output
	2	+12V			14	D0_Out	Reader Input
	3	SEN	15		+12V		
	4	BUT	16		GND		
	5	GND	17		D1_In		
	6	IN1	Aux Input		18	D0_In	
J2	7	NO1	Lock Relay 1	J4	19	RJ45	TCP/IP Interface
	8	COM1					
	9	NC1					
	10	NO2	Aux Output				
	11	COM2					
	12	NC2					

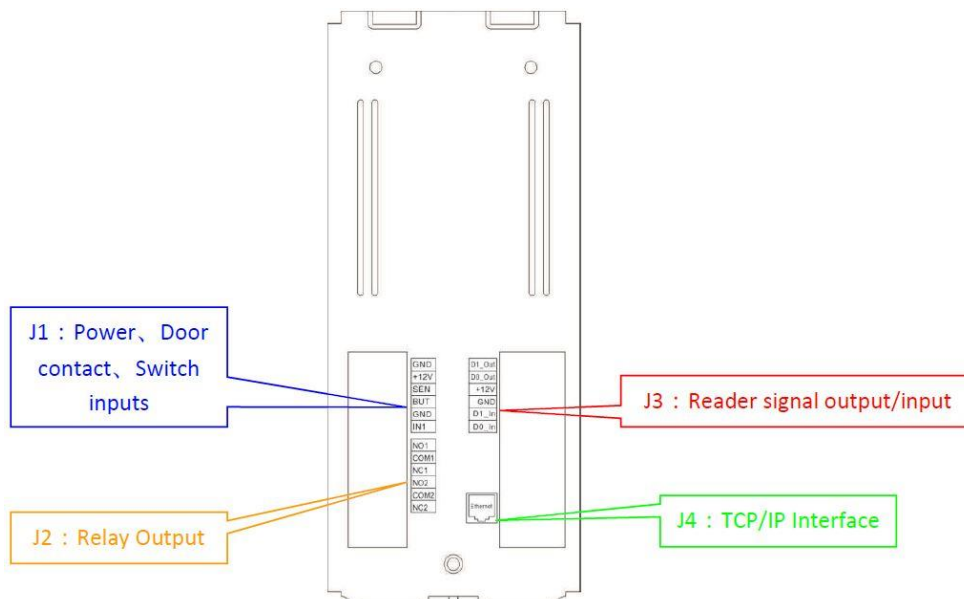

(3) Cable Requirements

Power cable: 18 AWG 7 Strand Bare Copper; 2 Conductors

Locks: 18 AWG 7 Strand Bare Copper; 2 or 4 conductors

Door Contact: 22 AWG 7 Strand Bare Copper; 2 Conductors

Reader In/Out: 22 AWG 7 Strand Bare Copper 3 Individual twisted pairs

(4) Wiegand Outputs

Standard 26/34 Wiegand bit format

(5) Power

Required working voltage: **12VDC**

Standby current: **≤150mA**

Working current: **≤200mA**

(6) Powering Fingerprint Reader

1. When powered up reader beeps 1-time and you will see display image.
2. To connect the fingerprint reader into the software please refers to WAB-BEM-FCKS manual.

(7) Troubleshooting

If the reader does not recognized a card or tag or does not turn on please refer to below table

Possible causes	Solutions
Incorrect cabling	Verify wiring, see (2) for proper wiring
No response on flashing a card (indicator off, buzzer no beeping)	Power problem(Check power supply) Invalid card type (use supported card)
Fingerprint or card information missing	Register FP/Card in PC (Connect to PC first)
Cannot open door by flashing card or FP	Strikes not powered up (check strikes power supply) Invalid Card/FP (register your card/FP)
Door opens when using fingerprint but not card	Check Private Authentication mode on personnel information should be Card/Fingerprint

Note: if any solutions above did not work please contact WatchNET Access Technical Support phone number +1-866-843-6865 or visit our website @ www.watchnetaccess.com



*All Logos & trade marks represent the registered users only. All rights reserved.
All product specifications on this brochure are subject to change without notice.*

Division of WatchNET Inc.

WatchNET[®]
Security Since 2000

Canada:

351 Ferrier Street Unit 5
Markham, Ontario L3R 5Z2
Tel: 416-410-6865
Toll Free: 1-866-843-6865
Fax: 1-866-331-3341

USA:

171 Cooper Ave. Suite 110
Tonawanda, NY 14150 USA
1-716-877-7277
Toll Free: 1-855-404-3193
Fax: 1-866-331-3341

UAE:

PO Box No 126312
Office Suite 703
Oxford Towers
Business Bay, Dubai, UAE
Tel: + 971 4 2767117

India:

RZ- 2, Ground Floor
Kapashera
Opp Kapashera Police Station
New Delhi-110037
Tel/Fax: +91 11 26816005

www.watchnetaccess.com
info@watchnetaccess.com